



Model	Capacity	Lifting Range	Base Dimensions
1162T	8000kg	468-715mm	324 x 294mm

# About the TradeQuip brand

The **'TradeQuip'** brand of workshop equipment, is designed for use in a demanding workshop environment by professional users. With proven and trusted "*Made for the Trade"* reliability, *'TradeQuip'* branded products offer the very best in performance for an affordable price. All backed by a 1year trade guarantee across 1,000+ distributors Australia wide.



Made in China to TQB Brands Pty Ltd specifications Visit us at www.tqbbrands.com.au

# WARNING INFORMATION

#### IMPORTANT: READ ALL INSTRUCTIONS BEFORE USE



The instructions and warnings contained in this manual should be read and understood before using or operating this equipment. Do not allow anyone to use or operate this equipment until they have read this manual and have developed a thorough understanding of how this equipment works. Failure to observe any of the instructions contained in the manual could result in severe personal injury to the user or bystanders, or cause damage to the equipment and property. Keep this manual in a convenient and safe place for future reference.

Whilst every effort has been made to ensure accuracy of information contained in this manual, the TradeQuip policy of continuous improvement determines the right to make modifications without prior warning.

# CONTENT

WARNING INFORMATION	2
CONTENT	2
STANDARD OPERATING PROCEDURE	3
ASSEMBLY, OPERATION & PREVENTATIVE MAINTENANCE	4
WARRANTY	5

Long loose hair must be contained when operating

Close fitting/protective clothing must be worn

when operating this equipment

this equipment

### STANDARD OPERATING PROCEDURE

**DO NOT** use this machine unless you have been trained and assessed to a competent level in its sate use and operation, and have been given permission to use this



Safety glasses must be worn when operating this equipment

Safety footwear must be worn when operating this equipment



Rings and jewellery must not be worn when operating this equipment

# SAFETY CHECKS

### PRE-OPERATIONAL SAFETY CHECKS


- Read and understand all warnings and operating instructions
- Confirm that the load to be applied does not exceed the working load limit of the vehicle support stands
- Conduct a pre-operational check of the equipment
- Use vehicle support stands on a hard level surface, such as concrete
- Use vehicle support stands in pairs
- Check that no part of the underbody of the vehicle will foul as the stands are positioned
- Ensure that each stand is securely located under a strong part of the vehicle. Consult the vehicle manufacturer's manual for guidance.
- Chock the unlifted wheels of the vehicle
- Do not extend the height of the stand beyond its maximum working height, nor use any item such as bricks or timber to support the vehicle

WARNING!

- Modifications must not be carried out or accessories added
- Use the right product for the job. There are certain applications for which the jack stands was designed.
- Do not modify the jack stands and do not use the jack stands for a purpose for which it was not intended.

#### INTENDED USE

In pairs for automotive use where a lifted vehicle is to be supported before conducting servicing or repair work.

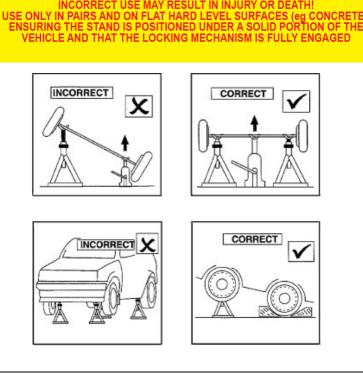


# ASSEMBLY, OPERATION & PREVENTATIVE MAINTENANCE

## 1. FEATURES

TradeQuip Jack Stands are ideally suited to the professional trade workshop. These ratchet type jack stands are designed with a cast iron support post, tough steel plate welded base and deep saddle for positive location under the vehicle. The cast iron post is equipped with angled teeth to prevent accidental release of load - the more weight applied, the tighter the post is locked.

## 2. ASSEMBLY

- 1. Install ratchet bar into frame with ratchet portion of bar aligned with ratchet stop.
- 2. Move the ratchet bar to its lowest position by raising the locking handle and guiding the bar downward.
- 3. Secure the ratchet bar into the frame by bending the locking tab inwards using a hammer and punch. This will help prevent inadvertent separation of the ratchet bar from the base frame.

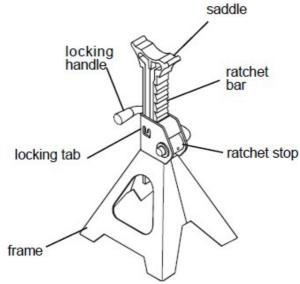

### 3. BEFORE USE

Conduct a thorough visual inspection checking for leaks and any abnormal conditions, such as cracked welds, and damaged, loose, or missing parts.

## 4. OPERATION

Prior to each use always conduct a visual inspection checking for any abnormal conditions, such as cracked welds, and damaged, loose, or missing parts.

#### **To Support Vehicle:**

- Adjust height by pulling up on ratchet bar ensuring the ratchet stop is fully engaged.
- The weight of the locking handle should secure the ratchet bar in the desired position. To confirm simply push down on locking handle.
- Check to ensure ratchet is secure before loading.
- Raise the vehicle and carefully position the ratchet jack stand so that the vehicle load is centred on the stand's saddle.
- Slowly lower the vehicle onto the stands securely chock wheels remaining on the ground in both directions.
- Ensure load is secure before starting work on, around or under the vehicle.

# \Lambda warning

- The stands must be positioned on a hard level (concrete) surface.
- The safe working load must not be exceeded under any circumstances.
- Lift and lower only on jacking points specified by vehicle manufacturer.
- Always centre the vehicle load on the saddle.
- Use as a pair to support one end of vehicle only

#### **To Lower Vehicle:**

- Ensure that all tools, equipment and personnel are clear before lowering the load
- Raise vehicle clear of stands with a suitable jack.
- Carefully release the ratchet stop and lower the ratchet bar down to the lowest position. DO NOT allow to drop.
- Carefully remove stands from underneath vehicle.
- Slowly lower vehicle to the ground with suitable jack.

## 5. STORAGE

These Jack Stands should always be stored in a dry indoor location in the upright position.

## 6. MAINTENANCE

Periodically inspect each stand. Ensure all parts move freely. Do not apply oil or grease to any part of this product. If rust appears, sand the affected area and cover with suitable paint. This product has no replacement parts.

# 7. SERVICE & REPAIR

Any Jack Stands found damaged in any way, or found to be worn or operates abnormally should be removed from service until repaired by an authorised service agent. Owners and / or operators should be aware that repair of this product may require specialised equipment and knowledge. Only authorised parts, labels, decals shall be used on this equipment. Annual inspection of the Jack Stands is recommended and can be made by an authorised repair facility to ensure that your equipment is in optimum condition and that the equipment has the correct decals and safety labels specified by the manufacturer.

# WARRANTY

TradeQuip products have been carefully tested and inspected before shipment and are guaranteed to be free from defective materials and workmanship for a period of 12 months from the date of purchase except where tools are hired out when the guarantee period is ninety days from the date of purchase.

Should the machine develop any fault, please return the complete tool to your nearest authorised warranty repair agent or contact TQB Brands Pty Ltd Warranty team – <u>warranty@tqbbrands.com.au</u>.

If upon inspection it is found that the fault occurring is due to defective materials or workmanship, repairs will be carried out free of charge. This guarantee does not apply to normal wear and tear, nor does it cover any damage caused by misuse, careless or unsafe handling, alterations, accident, or repairs attempted or made by any personnel other than the authorised TQB Brands Pty Ltd repair agent.

This guarantee applies in lieu of any other guarantee expressed or implied and variations of its terms are not authorised.

Your TQB Brands Pty Ltd guarantee is not effective unless you can produce upon request a dated receipt or invoice to verify your proof of purchase within the 12 month period.

## **Consumer Guarantee**

Our goods come with a guarantee that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.



All images and illustrations shown are for reference purposes only. All information, specifications and illustrations in this manual are based on the latest information available at the time of publication and are subject to change without notice. The information in this manual is periodically revised to ensure the latest information is included. Download the latest version of this manual and other related technical documentation from <u>www.tgbbrands.com.au</u>.